





MULTIPLE SOCKET COUPLERS								
		INPUT				COUPLER OUTPUTS		
		Rated current (In)	Rated voltage (Un)	Poles	Reference h.	No. 2, 16A socket-outlets	No. 3, 16A socket-outlets	No. 3, 32A socket-outlets
	Without cable	16A	100 - 130V	2P + \perp	4	GW 64 008	GW 64 022	
			200 - 250V	3P + \perp	4		GW 64 023	
				2P + \perp	6	GW 64 010	GW 64 024	
				3P + \perp	9	GW 64 011	GW 64 025	
				3P+N+ \perp	9	GW 64 012	GW 64 026	
			380 - 415V	3P + \perp	9	GW 64 013	GW 64 027	
346 - 415V	3P+N+ \perp	6	GW 64 014	GW 64 028				
	32A	380 - 415V	3P + \perp	6			GW 64 068	
	With cable	16A	100 - 130V	2P + \perp	4		GW 64 050	
			200 - 250V	2P + \perp	6		GW 64 052	
			380 - 415V	3P + \perp	6		GW 64 055	
			346 - 415V	3P+N+ \perp	6		GW 64 056	

MULTIPLE SOCKET ADAPTORS									
		INPUT			OUTPUTS				
		Rated current (In)	Rated voltage (Un)	Poles	Reference h.	No. 3 socket-outlets			Code
						2P+ \perp 230V~	3P+ \perp 400V~	3P+N+ \perp 400V~	
	16A	346 - 415V	3P+N+ \perp	6	6	2x16A		1x16A	GW 64 059
						1x16A	1x16A	1x16A	GW 64 060
	32A	200 - 250V	2P + \perp	6	6	3x16A			GW 64 062
						1x16A	1x16A	1x16A	GW 64 063
						2x16A		1x32A	GW 64 064
						1x32A	1x32A	1x32A	GW 64 061
63A	380 - 415V	3P+N+ \perp	6	6	2x32A		1x63A	GW 64 065	

PHASE INVERTER								
		INPUT			OUTPUTS			
		Rated current (In)	Rated voltage (Un)	Poles	Reference h.	No. 1 socket-outlet		Code
						3P + \perp 400V~	3P + N + \perp 400V~	
	16A	380 - 415V	3P + \perp	6	6	1x16A		GW 64 066
		346 - 415V	3P+N+ \perp	6	6		1x16A	GW 64 067

Important: the range of multipliers, adaptors and shunts should be considered a supplementary part of the electrical system, as they are suitable only for temporary, mobile installations and connections, and not for permanent applications. Furthermore, the range cannot be used in areas at greater risk in the event of a fire.