


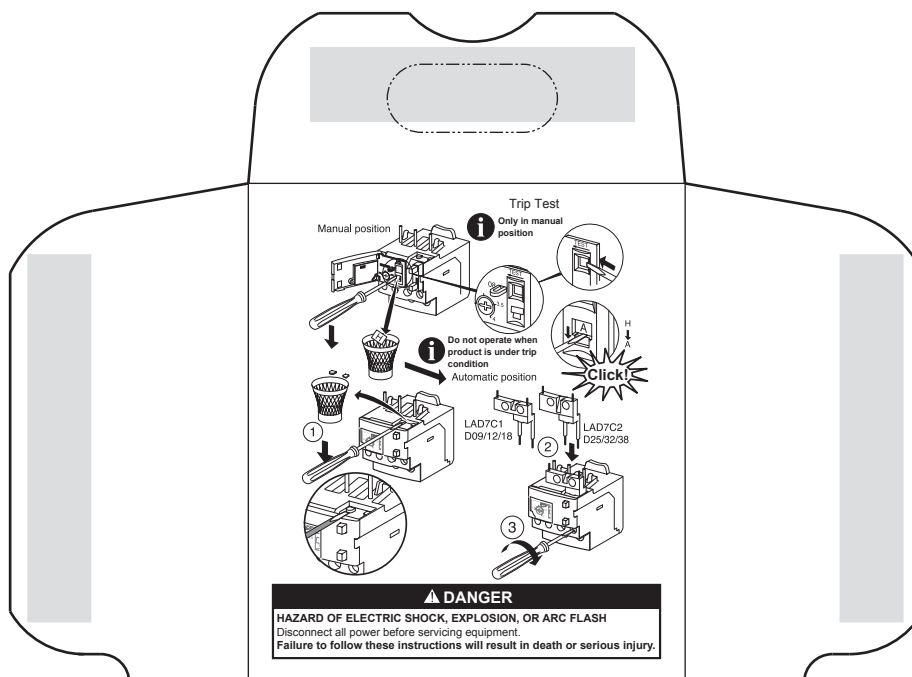


AWG	(mm) ²	(mm)	(mm)	(N.m)
1-2.5	18...14	8	1,7	15
1-6	18...10	10	1,7	15
1-5-8	16...10	3/8	1,7	15
1-4	18...10			

LR.D01 to LR.D21

AWG	(mm) ²	(mm)	(mm)	(N.m)
1-2.5	18...14	8	1,7	15
2.5-10	14...8	10	2,5	20
2.5-10	14...8	3/8	2,5	20
1-5-8	16...10			

LR.D22 to LR.D35

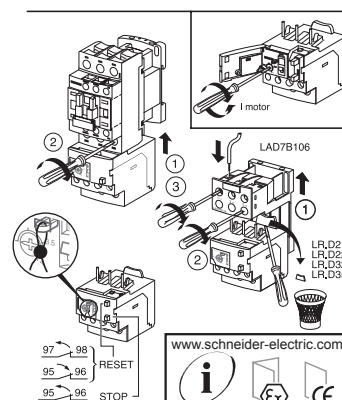

W9 1675200 0211 A06
07 - 2012

⚠ WARNING

RISK OF FIRE OR ELECTRIC SHOCK (FOR CONTACTOR WITH UL-HI-FALUT SHORT CIRCUIT CURRENT RATINGS ONLY)

The opening of the branch-circuit protective device may be an indication that a fault current has been interrupted. To reduce the risk of fire or electrical shock, current-carrying parts and other components of the device may become extremely hot. Do not touch these parts until they have cooled. Failure to follow these instructions can result in death, serious injury or equipment damage.

AWG	(mm) ²	(mm)	(mm)	(N.m)
1-2.5	18...14	8	1,7	15
1-6	18...10	10	1,7	15
1-5-8	16...10	3/8	1,7	15
1-4	18...10			
8	5/16	12	5,8	3/8

LR.D016 to LR.D216

AWG	(mm) ²	(mm)	(mm)	(N.m)
1-2.5	18...14	8	1,7	15
2.5-10	14...8	10	2,5	20
2.5-10	14...8	3/8	2,5	20
1-5-8	16...10			
8	5/16	12	5,8	3/8

LR.D226 to LR.D356